



# OTHER USES OF T-JOINTS


More variety At your DIY

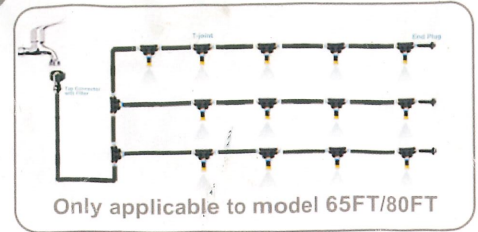

Series Fan

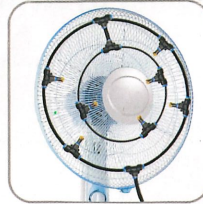

Double Loop

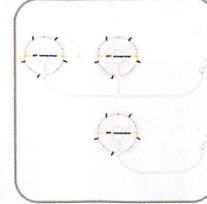


Series Fan



Monocyclic

Only applicable to model 35FT/50FT/65FT/80FT.

27FT/35FT/50FT/65FT/80FT

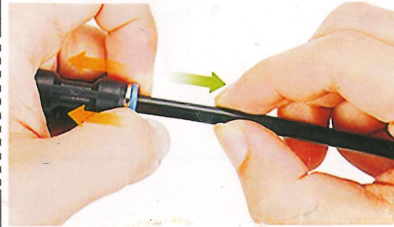

## How to Disconnect Pipe from T-joint

Please press the blue part of the T-joint with one hand, and pull out the pipes with the other.

## Warm Tips

### Q: How to prevent clogging?

A: Please choose one of the two methods. (Recommend the second)

1. When the misting system is installed, please flush the water pipe first, and then install the end plug for use.
2. When the misting system is installed, please screw out all the nozzles, and flush the water pipe first, then install the nozzles and the end plug for use.

### Q: How do you unclog a misting nozzle?

A: Cleaning Misting Nozzles

1. Screw out the blocked nozzle from the system.
2. Take out the black O-ring from the misting nozzle.
3. Soak the clogged misting nozzle or misting nozzles in white vinegar or CLR for at least an hour.
4. Rinse the misting nozzle, flush your misting lines and mount the misting nozzles back into your misting system.